

HỆ KHUNG TRẦN CHÌM Concealed Ceiling System


MONO KHUNG TRẦN CHÌM PHỔ THÔNG Standard Concealed Ceiling System




PARA KHUNG TRẦN CHÌM CAO CẤP Advanced Concealed Ceiling System



GAMMA KHUNG TRẦN CHÌM CAO CẤP Advanced Concealed Ceiling System

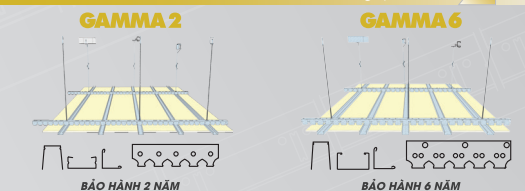

SUPER KHUNG TRẦN CHÌM CAO CẤP Advanced Concealed Ceiling System

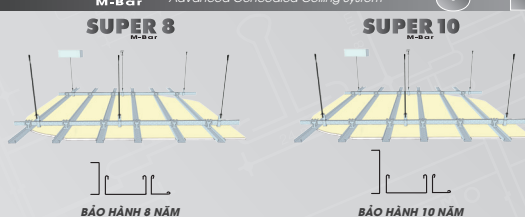


HỆ KHUNG TRẦN NỔI Exposed Ceiling System


ALPHA KHUNG TRẦN NỔI Exposed Ceiling System



MEGA KHUNG TRẦN NỔI Mega Exposed Ceiling System

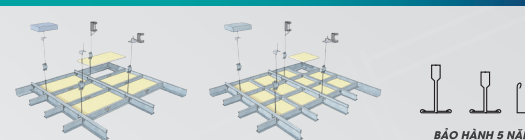

OMEGA KHUNG TRẦN NỔI SÓC ĐEN Iee System with Black Reveal

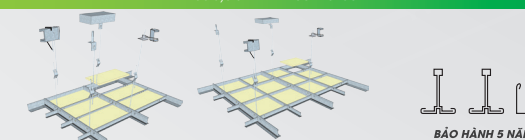


HỆ KHUNG VÁCH Drywall System


PARTI KHUNG VÁCH NGẮN PHỔ THÔNG Standard Drywall System



PARTI+ KHUNG VÁCH NGẮN CAO CẤP Advanced Drywall System

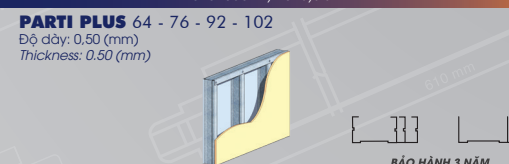

PARTI MAX KHUNG VÁCH NGẮN CAO CẤP Advanced Drywall System

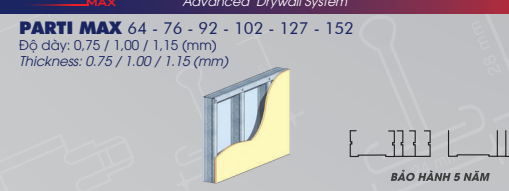

TẤM TRẦN Ceiling Board

GYP ART TẤM THẠCH CAO MỸ THUẬT GypArt Board




DOMINO TRẦN KIM LOẠI Metal Ceiling



PHỤ KIỆN AAA Accessories

AAA CỬA THÂM TRẦN Access Panel

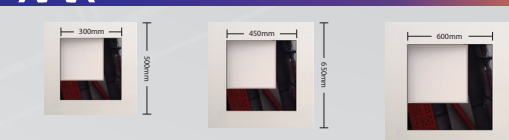

AAA BĂNG KEO LƯỚI Fiberglass Tape




AAA BĂNG KEO GIẤY Paper Tape



NHÀ MÁY SẢN XUẤT KHUNG TRẦN VÀ KHUNG VÁCH MANUFACTURER OF CEILING AND DRYWALL STEEL FRAME



KHUNG TRẦN CHÌM CAO CẤP PARA5 Advanced Concealed Ceiling System

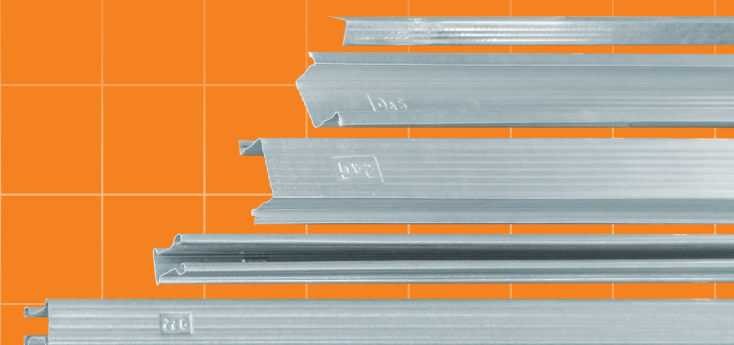

D & S CORPORATION
CÔNG TY CỔ PHẦN D&S


Chất Lượng
& AN TOÀN
Quality and Safety

HỆ KHUNG TRẦN CHÌM CAO CẤP **PARA5**
ADVANCED CONCEALED CEILING SYSTEM

PARA5



CHI TIẾT KỸ THUẬT / DETAIL

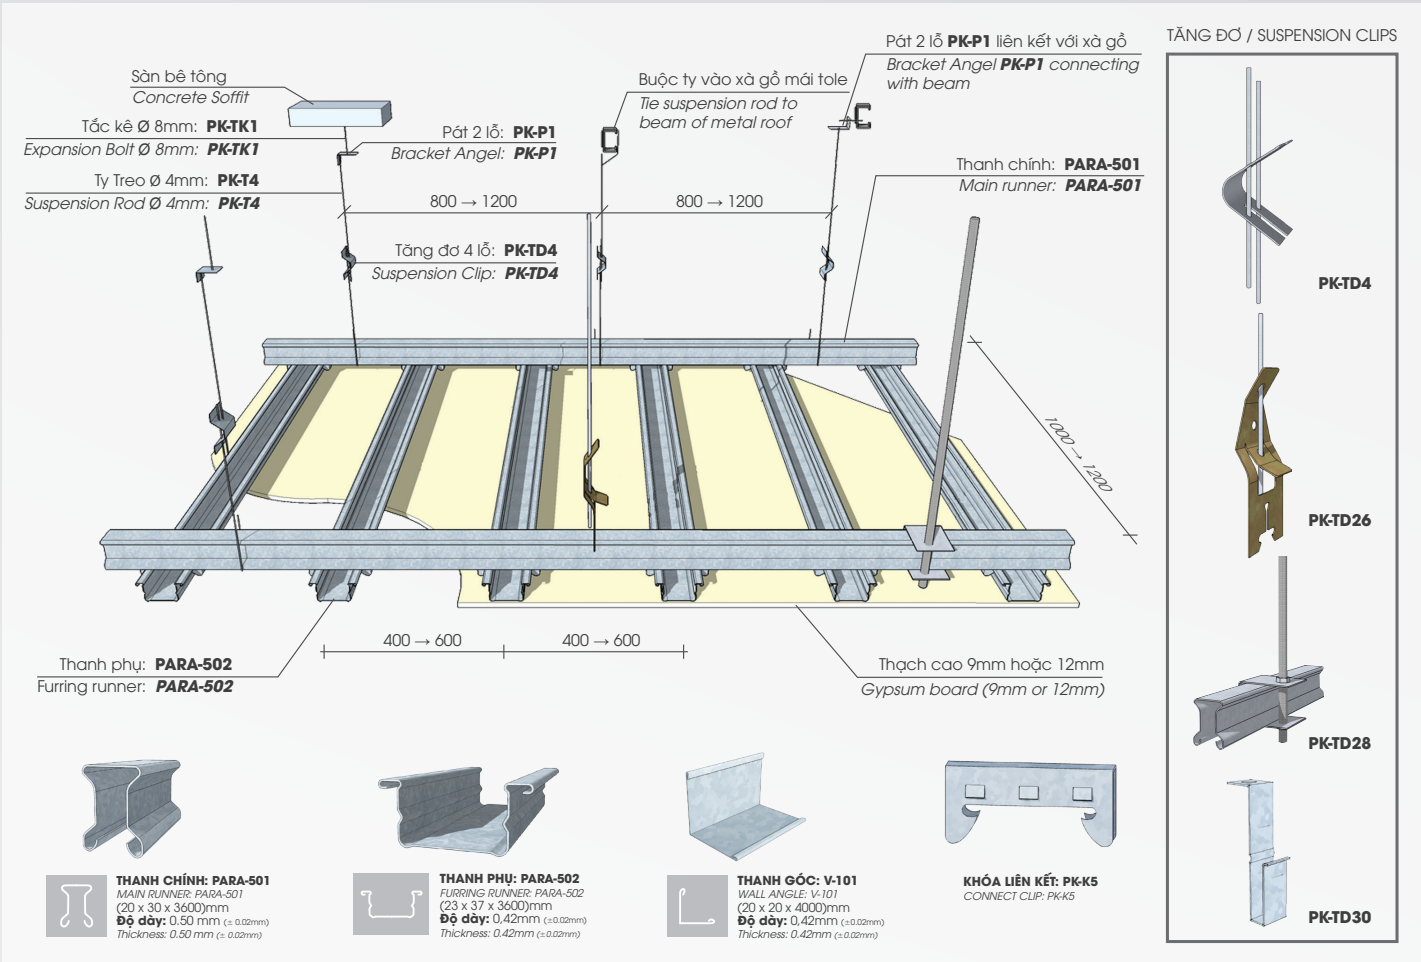

HƯỚNG DẪN LẮP ĐẶT

- Bước 1:** Định vị cao độ trần.
Bước 2: Lắp thanh góc theo cao độ trần.
Bước 3: Treo ty vào sàn bê tông hoặc xà gỗ với khoảng cách ≤ 1000mm.
Bước 4: Lắp thanh chính vào ty treo.
Bước 5: Lắp thanh phụ vào thanh chính bằng khóa liên kết.
Bước 6: Điều chỉnh phẳng khung trần và lắp tấm.
Khoảng cách vít ở biên tấm trần ≤ 200mm và giữa tấm trần là ≤ 300mm.
Bước 7: Dán băng keo lưới toàn bộ mối nối tấm trần.

INSTALLATION GUIDE

- Step 1:** Determine the height of the false ceiling.
Step 2: Install the wall angles at the height of the false ceiling.
Step 3: Hang the suspension rods from the concrete soffit or the beam, spacing ≤ 1000mm.
Step 4: Install the main runners connecting with the suspension rods.
Step 5: Install the furring runners connecting with the main runners using connect clips.
Step 6: Adjust the height of ceiling frame and fix boards onto frame.
The spacing between screws at the borders ≤ 200mm; in the middle ≤ 300mm
Step 7: All joints to be applied with adhesive tapes.

